


Vertical blinds measuring instructions


Long and failure-free operation of a window shutter depends not only its high quality but also on correct fit and installation. To make the cover fit perfectly, the chosen place needs to be correctly and carefully measured.

You need to strictly follow the below supportive drawing:

Fitting inside a window recess

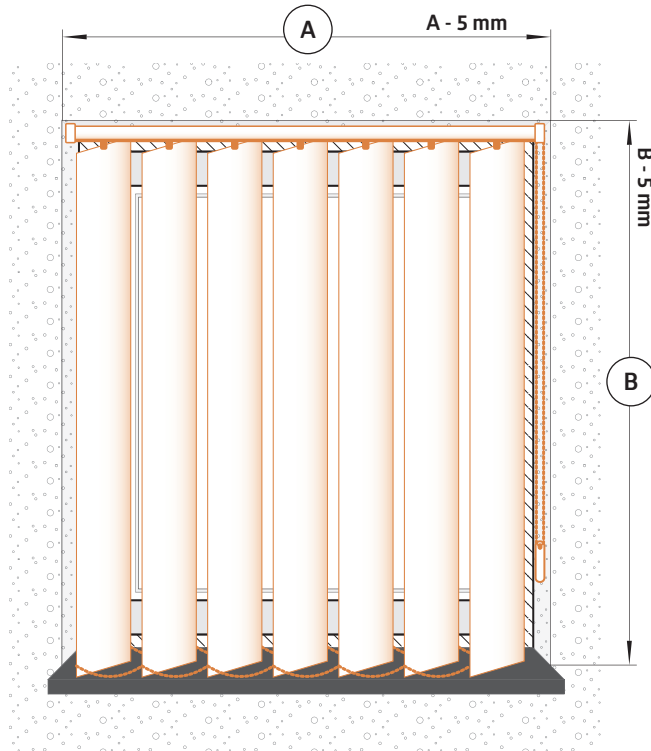

Fitting outside window recess

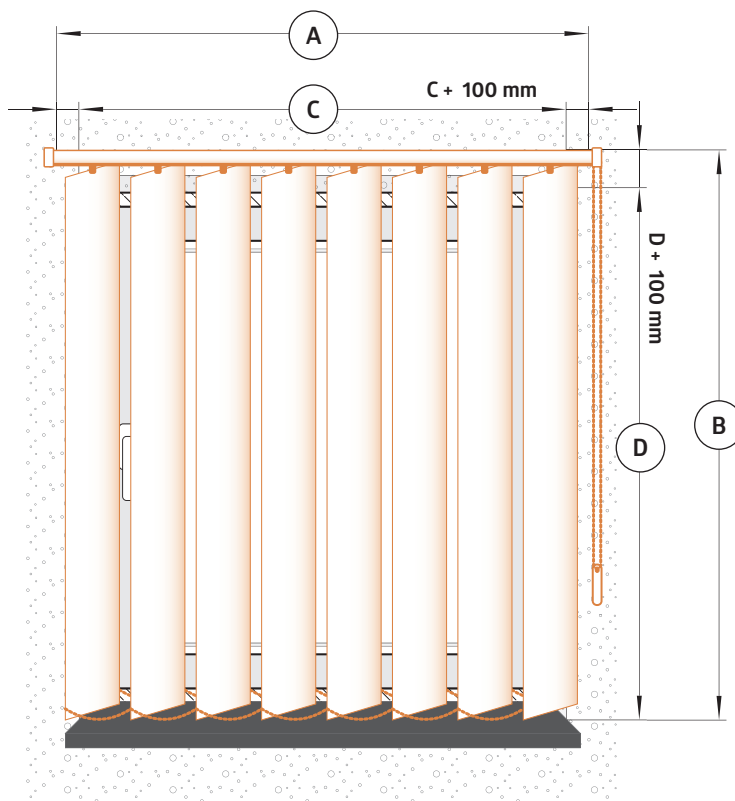

A - WIDTH OF THE RECESS

If the recess width is not the same in all spots, the lowest dimension of the recess should be assumed. 5mm is the distance that needs to be subtracted from the window recess width in order to install the vertical blind freely.

B - HIGH OF THE RECESS

If the recess height is not the same in all spots, the lowest dimension of the recess should be assumed. 5mm is the distance that needs to be subtracted from the window recess height in order to install the vertical blind freely.

A - WIDTH OF THE BLINDS

B - HIGH OF THE BLINDS

C - WIDTH OF THE RECESS

100 mm the distance is suggested to be added to the width of the recess to prevent clearances.

D - HIGH OF THE RECESS

100 mm the distance is suggested to be added to the height of the recess.

** All dimensions must be entered in millimeters*