


Plisse Blinds measuring instructions

Long and failure-free operation of a window shutter depends not only its high quality but also on correct fit and installation. To make the cover fit perfectly, the chosen place needs to be correctly and carefully measured.

You need to strictly follow the below supportive drawing:

Fitting inside window recess

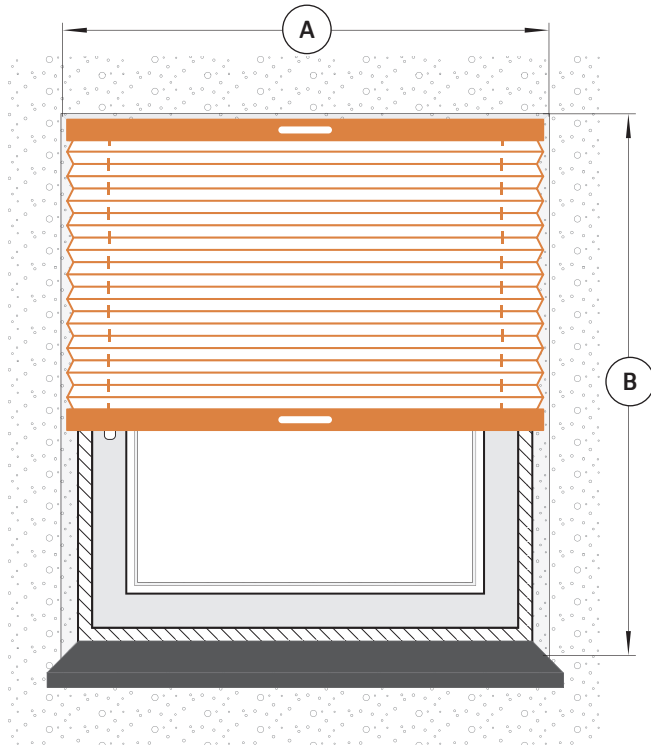

A - WIDTH


It is the width of the recess.

B - HEIGHT

It is the height of the recess.

Use this option if you want install the plisse blind inside window recess. Measure the window recess in 3 places as shown above, and give as with the smallest measurement. We will deduct a small amount to allow the roman blind cover the sides and bottom and enable its proper functioning. Is usually 1 cm in width and up to 1 cm in length.

Fitting outside window recess

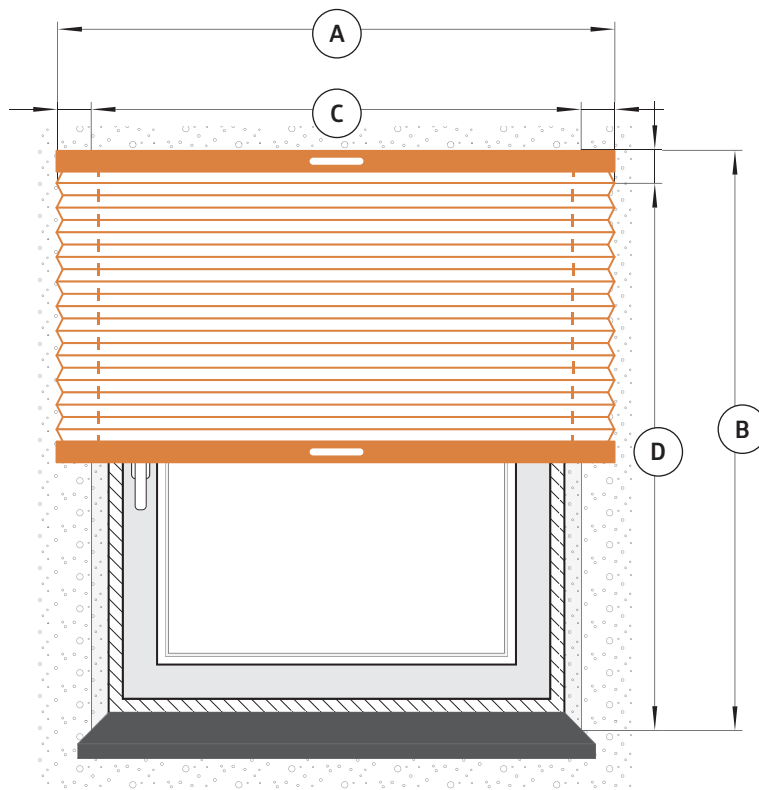

A - WIDTH OF THE BLINDS

B - HIGH OF THE BLINDS

Use this option if you want install the plisse blind outside window recess. We suggest that the blind is 8-10 cm wider each side than window recess. Also add 8-10 cm above and below window to be sure that the blind will cover the window.

C - IT IS THE WIDTH OF THE RECESS

D - IT IS THE HEIGHT OF THE RECESS

** All dimensions must be entered in millimeters*